



Instructions For Shavetronics Model ST-50 Cord Model Shaver



IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this appliance

DANGER – To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Except when charging, always unplug this appliance from the electrical outlet immediately after using.
5. Unplug this appliance before cleaning.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug. If it is not working properly, if it has been dropped or damaged, or dropped in water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never operate the appliance with the air openings blocked or while on a soft surface such as a bed, couch, where the air openings may be blocked. Keep the air openings free of lint, hair and the like.
7. Never drop or insert any object into any opening on the appliance.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Do not use this appliance with a damaged or broken comb, as facial injury may occur.
10. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to the "off" position, then remove the plug from the outlet.
11. Be sure the dual-voltage selector is in the correct voltage position before operating. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.
12. This appliance was set at the factory to operate at 120 volts. Refer to the operating instructions section of this manual for conversion to 240 volt operation or the equivalent.

SAVE THESE INSTRUCTIONS


1. Your new Shavetronics Cord Model (non-rechargeable) Shaver Model ST-50 is dual voltage for international use. Before using, make sure to adjust the voltage regulator to the correct setting.
 - For USA use, the correct setting is 120V.
 - For use in most countries overseas, the voltage selector is required to be placed in the 220V position.
 - To change the setting, use a coin to rotate the voltage regulator.
 - Just turn the regulator knob and line up the correct voltage with the marker.
 - Confirm the voltage available at each overseas location before using the shaver. For connection to a 220V supply, use an attachment plug adapter of the proper configuration of the wall outlet to be used.



2. Using the supplied power cord only, plug your shaver into your standard household outlet.

***To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits into a polarized outlet only one way. In the event the plug does not fit fully in the outlet, reverse the plug. In the event it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.**

3. Remove the protective plastic cover from the foil.
4. To turn the shaver to the "ON" (shaving) position, slide the switch panel up to the #1 position.
 - Using a gentle pressure against your skin, glide the shaver foil up and down your beard, then sideways to capture all the facial hair.
 - For deeply creased skin, a helpful hint would be to stretch your skin with your free hand to make it taut and continue shaving in both directions.

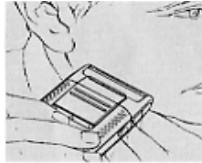

5. For long hairs which can not be cut using the foil head, slide the switch up to the top position which will engage the trimmer. The trimmer can be used to cut long hairs, sideburns and mustache.
6. Returning the switch to the #1 position will allow you to continue shaving with the foil.
7. When finished, slide switch down to the lowest position to turn the unit off.

For sensitive skin, we recommend using a shave stick powder or pre-shave lotion to reduce irritation to the skin. We highly recommend Derma Bloc unscented powder stick (available through any Shavetronics retailer—www.shavetronics.com).

Using the Trimmer

1. Push the slide switch up to the highest position to expose the trimmer.
2. Press the trimmer gently against your skin at a 45 degree angle, and trim slowly.
3. After use, switch the shaver to the lowest (off) position.



Care and Cleaning of Your Shaver

1. Before attempting any cleaning, always disconnect the shaver from the power supply.
2. The shaver should be cleaned every 2-3 days.


3. The shaver head should be lubricated approximately once a month along with regular cleaning. A drop or two of either baby oil or mineral oil (available in any drug store) directly upon the foil head with the shaver running is enough to lubricate the shaver.

Care & Cleaning of the Foil and Cutter

1. **To clean the shaver, remove the head frame** by depressing the latch release button located on the right side of the shaver body, while lifting off the head frame.



2. Using the cleaning brush supplied with the shaver, brush the hairs from the cutter moving the brush bristles through the fins (not across) then brush the surrounding area where hair was accumulated.
3. It is recommended **not** to use the brush inside the head frame as the foil is delicate and can tear if any of the bristles lodge into the holes.

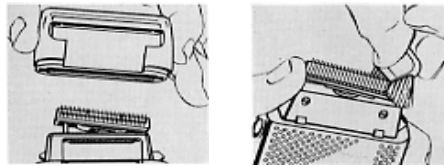


Replacing the foil

1. **Remove the head frame from the shaver body** by depressing the latch release button located on the right side of the shaver body, while lifting off the head frame. Your Shavetronics Shaver replacement foil comes with a new headframe for your convenience.
2. **For optimum performance of your shaver**, we recommend replacing the foil and cutter assembly yearly, however, due to variations in beard thicknesses and individual shaving habits, more frequent replacement may be required. We also recommend using a shaver lubricant spray weekly. Just a quick 2 second spray from one end of the foil to the other will keep your cutter sharper longer by cutting down on the friction between the foil and cutter.

How to replace the cutter

1. Remove the headframe (above), grab the cutter assembly at both ends and pull straight up. To reinstall the cutter, position it so that the pins located on the underside of the cutter are centered over the indentations in the cutter support. Press down to lock.
2. **A spray cleaner and lubricant (available at most better shaver shops)** is recommended for the long life of your cutters and foil with regular cleaning to reduce wear. With the shaver running, a quick spray directly onto the foil head after a thorough cleaning will keep the shaver operating at peak performance.

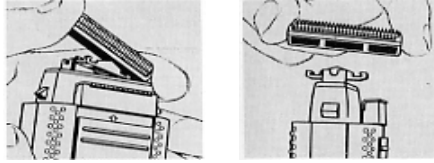

Caution

The foil is extremely thin. Do not drop the shaver or the foil alone or it could become damaged. Using excessive force on your skin can also damage the foil of the shaver. A damaged foil can cut your skin. Should you feel any roughness or pinching, inspect the foil for any tears, and replace when necessary. This shaver is for household use only.

Storage of the shaver and accessories

1. Store the shaver and accessories in the supplied shaver pouch in a low-humidity environment where there is little possibility of damage to the unit.
2. Do not twist, pull or otherwise deform the plug in any way when storing or packing for travel.
3. Always use the supplied protective cover on the shaver when not in use.

Warranty

Service under the Shavetronics warranty can be obtained in the USA by Shavetronics directly or by authorized dealers and service centers.

Any and all servicing should only be performed by an authorized service representative. This shaver has NO user serviceable parts. This product is for household use only.

Visit www.Shavetronics.com for more information on warranty repairs.

Copyright 2007, Shavetronics. All rights reserved.

